



 Preassemble components as shown below. To select correct bolt, remove one of the factory bolts from your brake/clutch assembly.

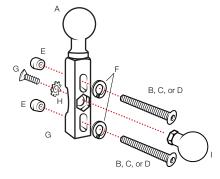

While holding factory clamp assembly in place, remove second factory bolt and replace with RAM® Base with hardware from Step 1. Store any unused components or hardware for possible future use.

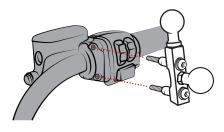

RMR-INS-B-309-2